

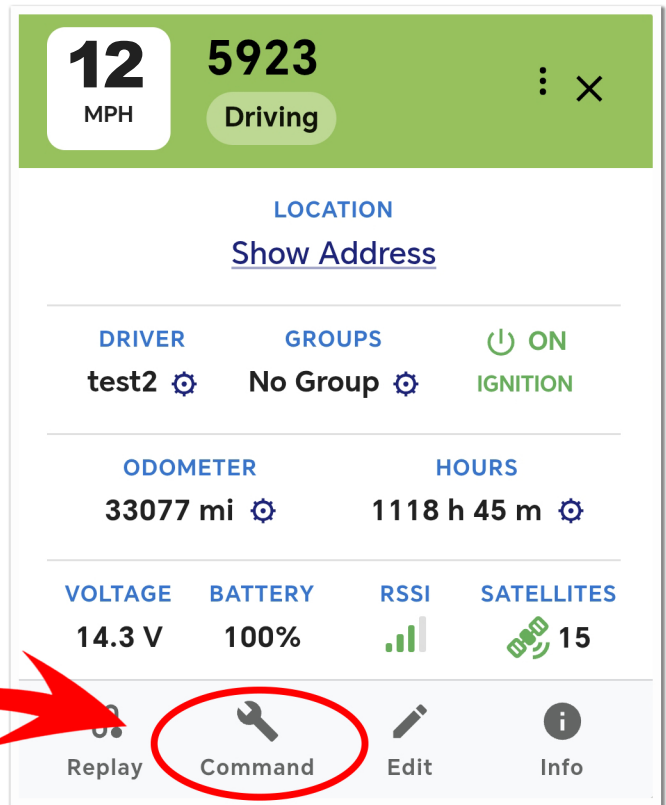


ENGINE IMMOBILIZATION GUIDE

1 SELECT THE VEHICLE FROM THE LIST.

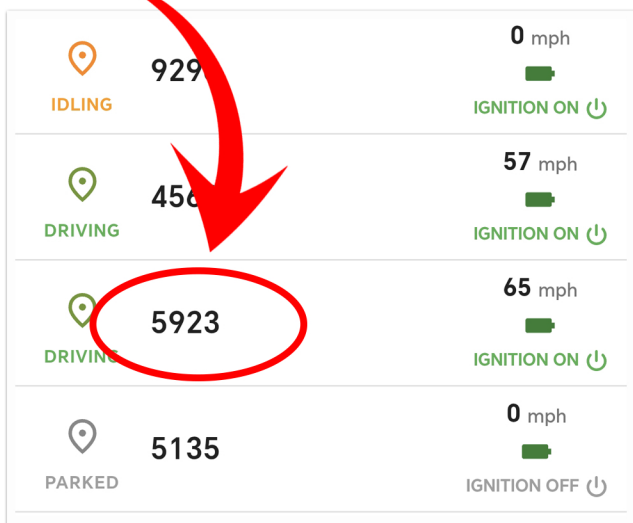


2 PRESS THE 'COMMAND' BUTTON ON THE STATUS CARD.

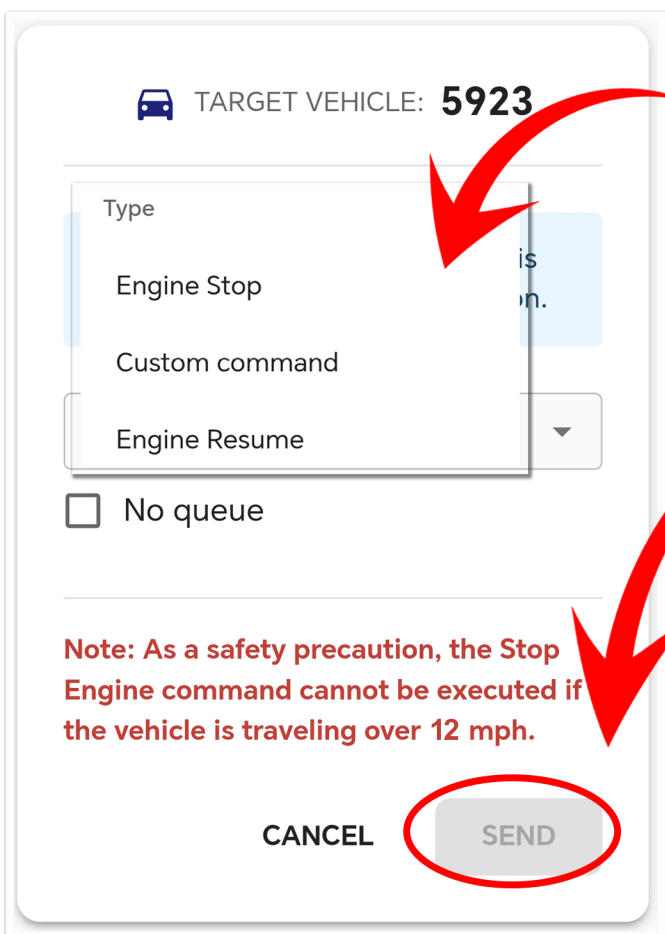

3 SELECT THE COMMAND FROM THE LIST.

4 CLICK THE 'SEND' BUTTON .

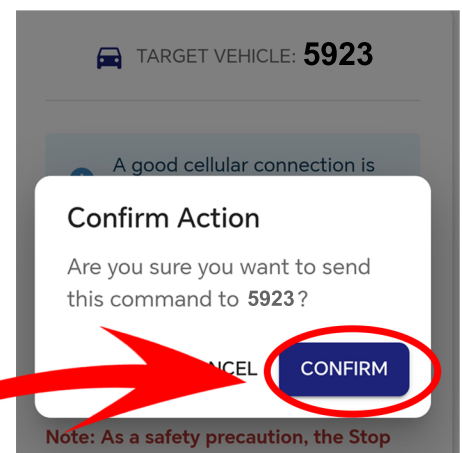

5 CLICK THE 'CONFIRM' BUTTON TO COMPLETE.